

## Cromanet CS v 1.1.8.1 Release Notes

This document contains a listing of new features and installation instructions.

### New Features and Fixes

1. Better dE and dH values from initial calibration even without iteration.
2. Better shadow detail; less flatness and more contrast in 4 color dark areas.
3. No solarization in shadow areas
4. New paper profiles for Canon:
  - a. Cromalin (Largo) Paper Glossy
  - b. Cromalin Fogra Certified Semi Matte
  - c. Cromalin Fogra Certified Glossy
5. 1808 calibration template for use with the manual EyeOne spectrophotometer. (Needed for those customers running the Cromanet Canon package and using manual calibration.)
6. Certification template to enable the Cromanet Verifier for the SpectroProofer. Needed for those customers that are still running Euro/custom profiles from AQ systems and would like to certify them.
7. Improved iteration; addition of the 1848 template for iteration.
8. Resized the 1808 template for 17 inch media.

### Installation Instructions

1. Before beginning the update, shut down Cromanet CS through the Launch Pad.
2. The updater to bring version 1.1.8 to version 1.1.8.1 is a zip file named V1181\_120309.zip. Locate the file and right-click it. Select **Extract All...**




3. The extraction wizard will open. Click **Next**



4. The Select a Destination screen of the Extraction Wizard opens. Click **Browse...** and navigate to dupont/dcc. Click **Next**.



5. A window will pop up to ask if you want to replace files of the same name with the new files. Click **Yes to All**.

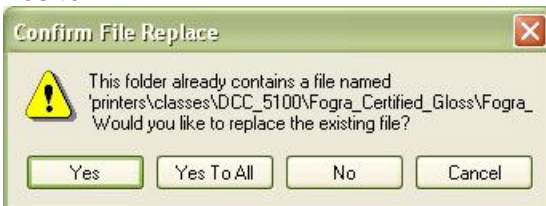

6. When the installation has completed, the Extraction Complete window will open. Click **Finish**.



7. Restart Cromanet CS. Proper installation is confirmed if the opening screen shows  
*Version 1.1.8.1*  
*Build December 03 2009 02:03 PM*
8. Important: Recalibrate the output types. There is no need to remake matches.

